

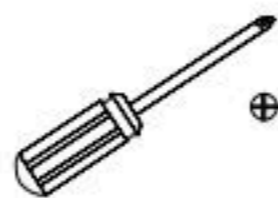


INSTRUCTION MANUAL

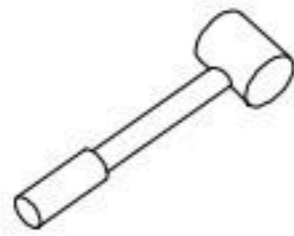


- 1** Connect the PPR tube according to the diagram.
Please pay attention to the position of hot and cold water inlet pipe when connecting the thermostatic mixer, and the pipe length is upto your need

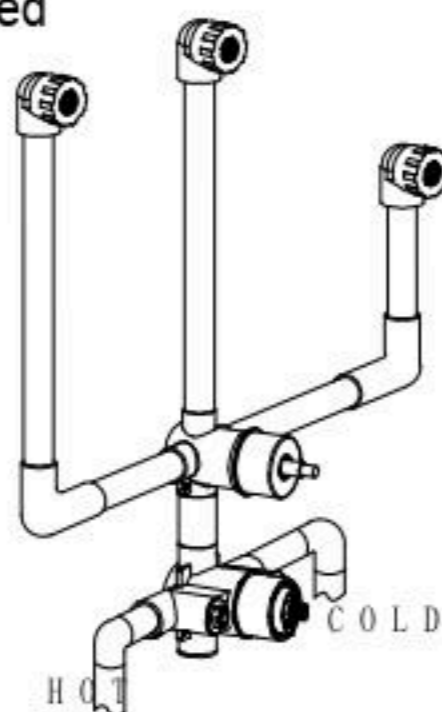


! Please keep the water running for a while before installation


2

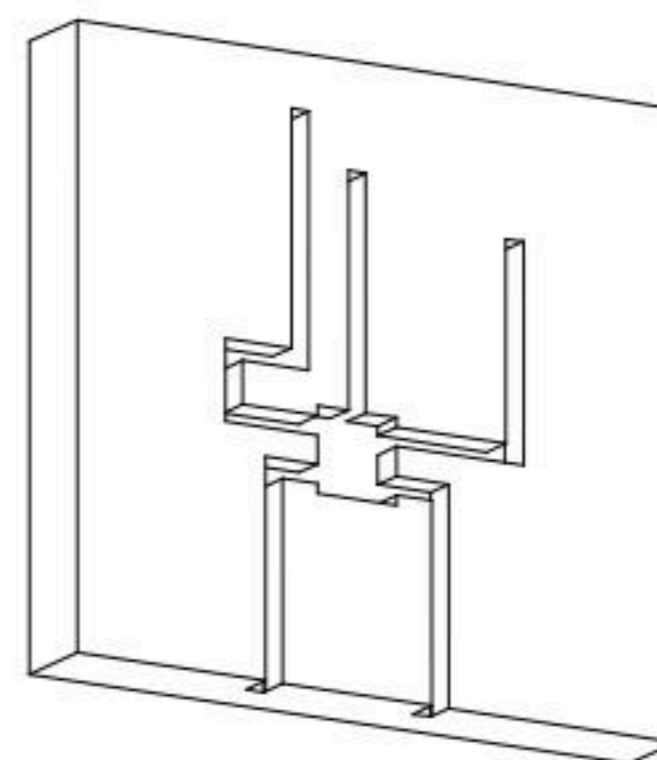


3

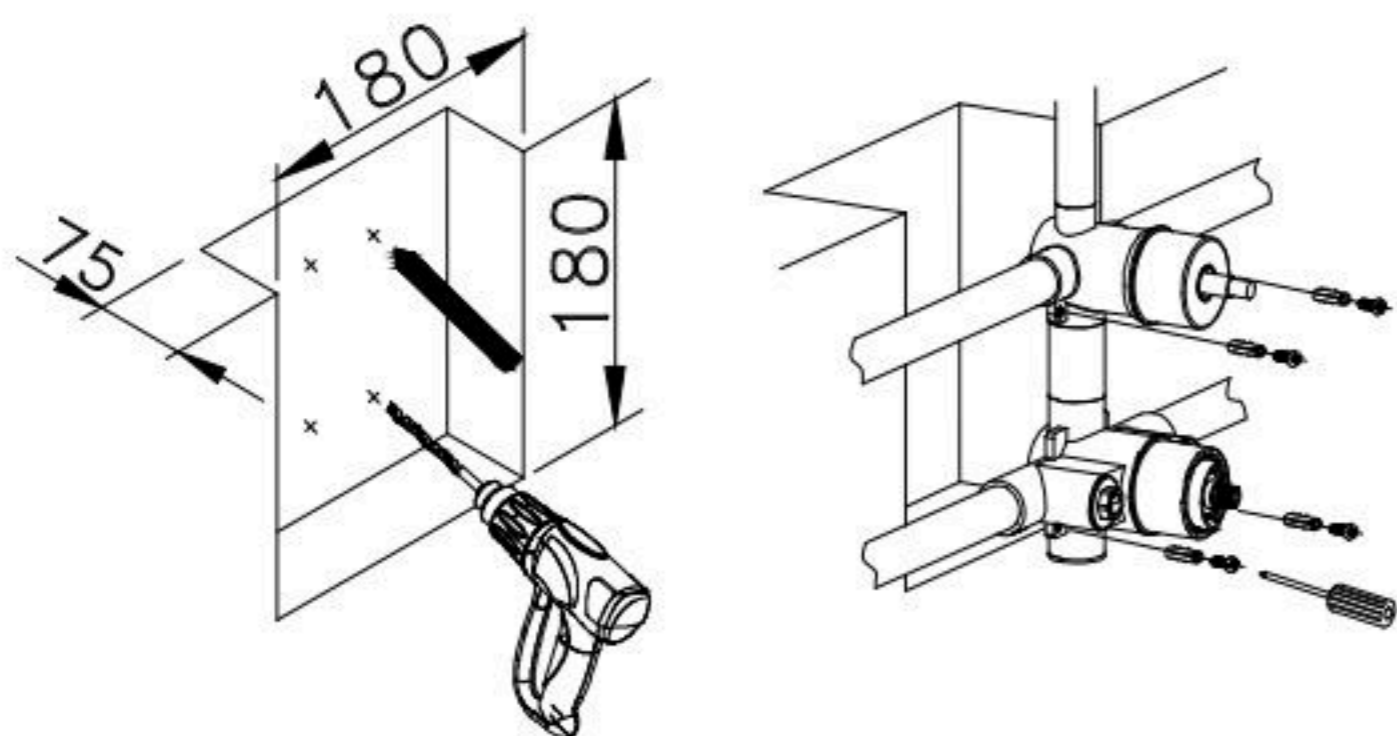

4

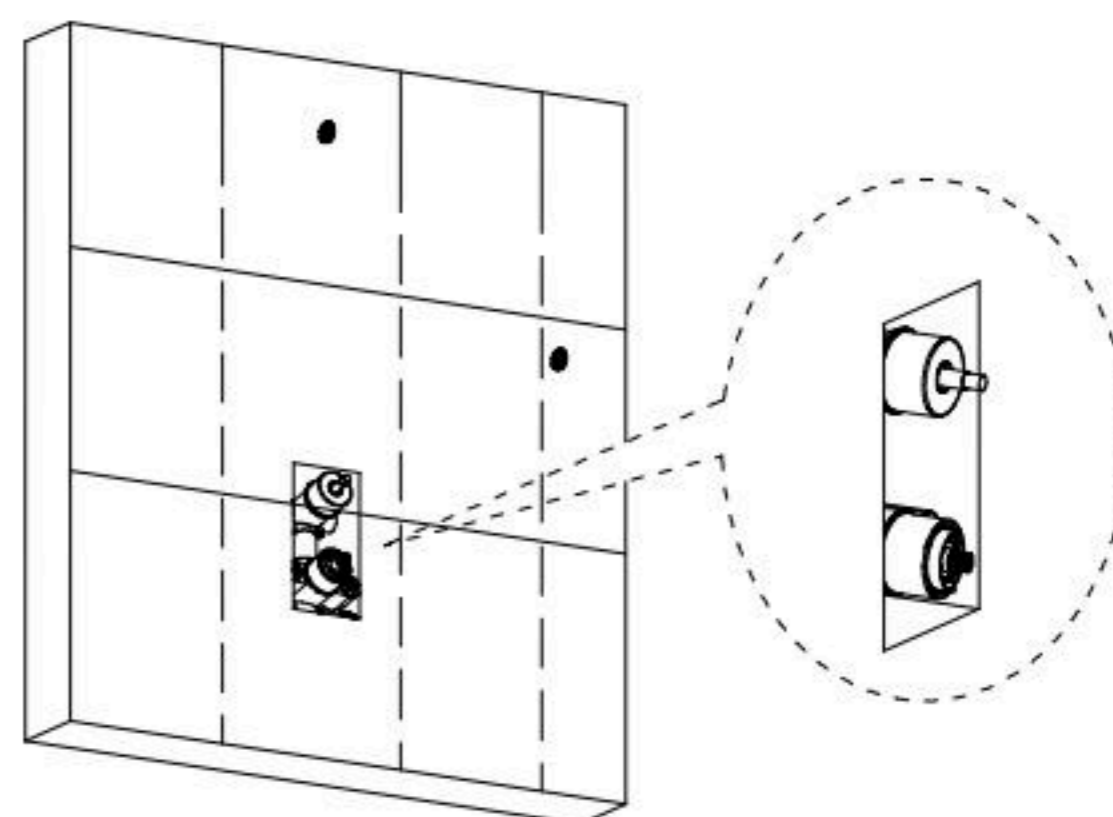

5

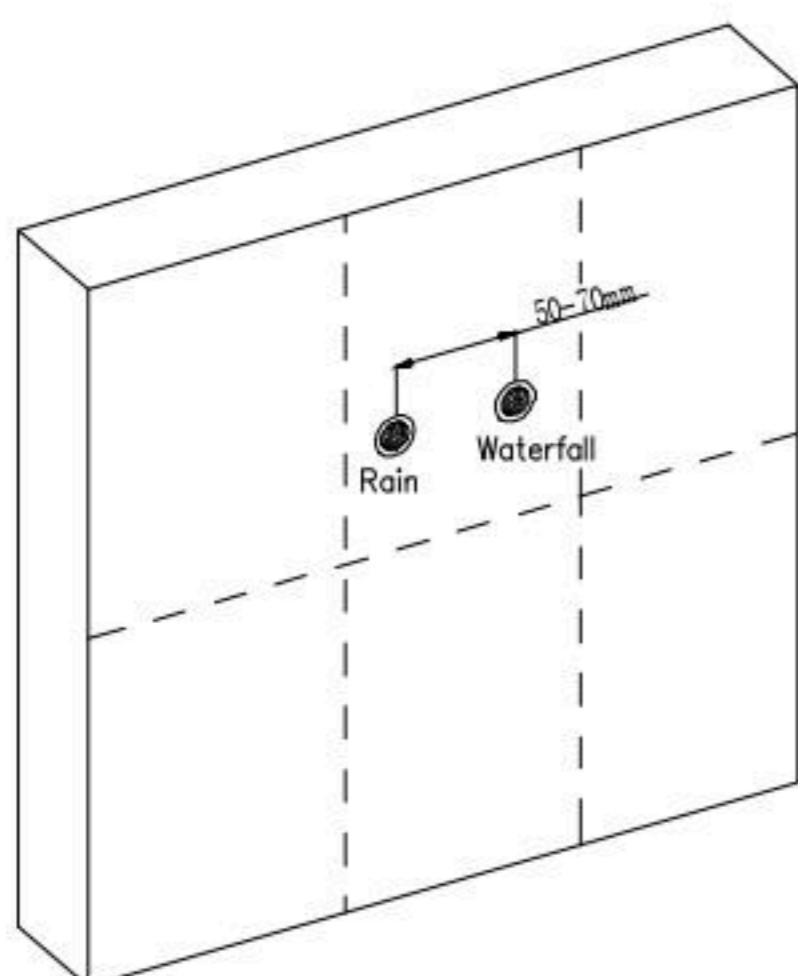

6

